 


OPERATING INSTRUCTIONS

Palsonic

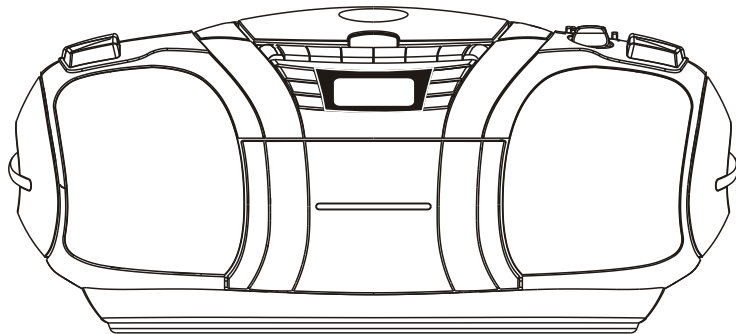

USB

FLASH MEMORY
MP3 PLAYBACK

SD

MEMORY CARD
MP3 PLAYBACK

DBBS

SUPER BASS
BOOSTER

DX

DIGITAL
TUNER


MP3

DIGITAL
PLAYBACK

6-WAY

SPEAKER
SYSTEM

 CD-RADIO-CASSETTE RECORDER
WITH DIGITAL DISPLAY AM/FM TUNER
MODEL : CD6990DM3UC

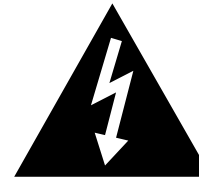

The lightning flash and arrowhead within the triangle is a warning sign alerting you of "dangerous voltage" inside the product.

CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**

WARNING: To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.



The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product.

WARNING:
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO DRIPPING OR SPLASHING LIQUIDS.

NOTE: CAUTION SYMBOLS ARE PRINTED ON REAR OF UNIT.
PLEASE REFER TO INSTRUCTION MANUAL.

PLEASE NOTE: YOU WILL FIND THE RATING LABEL FOR THIS PRODUCT LOCATED ON THE BASE OF THE UNIT.



CAUTION

DO NOT EXPOSE TO DRIPPING OR SPLASHING LIQUIDS!

CAUTION: GROUNDING OR POLARIZATION. THE PRECAUTIONS SHOULD BE TAKEN SO THAT THE WIDER BLADE OF THE AC PLUG MUST MATCH THE SLOT IN RECEPTACLE "WALL SOCKET".

CAUTION: INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED. AVOID EXPOSURE TO BEAM.

VORSICHT: UNSICHTBARE LASERSTRAHLUNG TRITTS AUS, WENN DECKEL GEÖFFNET UND WENN SICHERHEITSVERRIEGELUNG ÜBERBRÜCKT IST. NICHT DEM STRAHL AUSSETZEN.

WARNING: OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD OCH SPÄRR ÄR URKOPPLAND. STRÅLEN ÄR FARLIG.

ADVARSEL: USYNLIG LASERSTRÅLING VED ÅBNING. NÄR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION. UNDGÅ UDSÆTTELSE FOR STRÅLING.

 
ATTENZIONE: RADIONI LASER INVISIBILE. NON GUARDARE DIRETTAMENTE NELLA SORGENTE DEL LASER.

ACHTUNG: LASERLINSE NICHT BERÜHREN UNSICHTBARER LASERSTRAHL.

AVISO: A LENTE NUNCA DEVE SER TOCADA.



CLASS 1 LASER PRODUCT
KLASSE 1 LASER PRODUKT
LASER DE CLASSE
LASER DI PRIMA CLASSE
KLASSE 1 LASER
LASER PRIMERA CLASE
LASER CLASSE 1
KLASSE 1 LASER PRODUKT

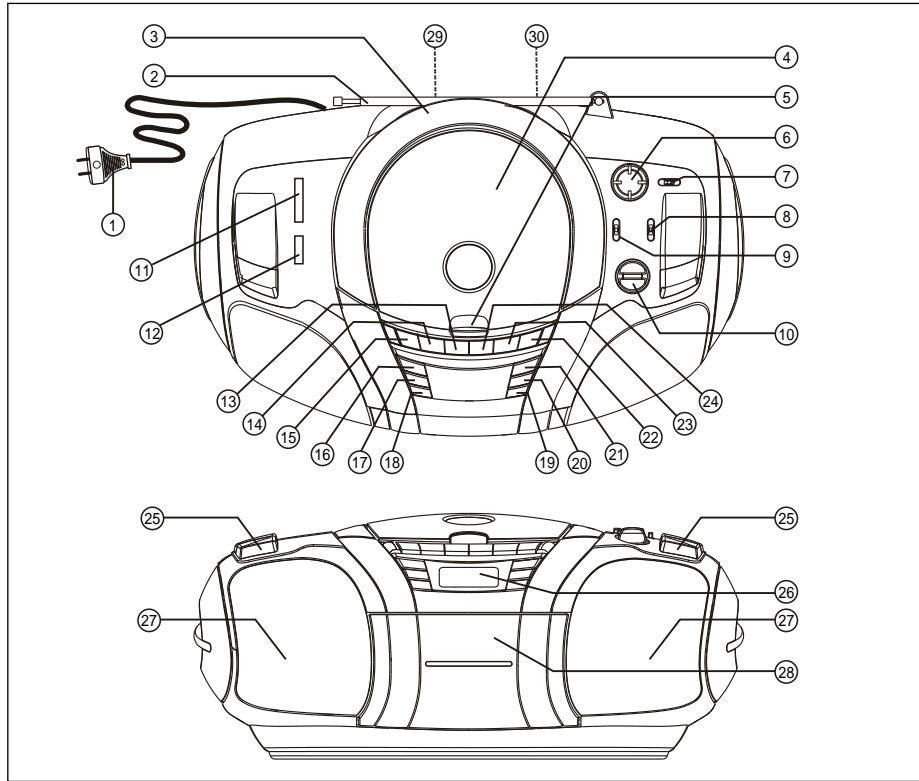

LOCATION OF CONTROLS



- | | |
|--|---|
| 1. AC POWER CORD AND PLUG | 16. CD "STOP/ CD/ USB/ SD" BUTTON |
| 2. TELESCOPIC ANTENNA | 17. CD "REPEAT/ PROG." BUTTON |
| 3. HANDLE | 18. CD "SKIP +10/ FOLDER" BUTTON |
| 4. CD DOOR | 19. CD "BACK" BUTTON |
| 5. CD DOOR FINGER GRIP | 20. CD "NEXT" BUTTON |
| 6. RADIO TUNING CONTROL KNOB | 21. CD "PLAY" BUTTON |
| 7. RADIO BAND SELECTOR SWITCH
(AM/ FM/ FM-ST.) | 22. CASSETTE RECORDING BUTTON |
| 8. DBBS ON/ OFF SWITCH | 23. CASSETTE PLAY BUTTON |
| 9. FUNCTION SWITCH
[TAPE (OFF)/ RADIO/
CD (CD-MP3/ USB-MP3/ SD-MP3)] | 24. CASSETTE REWIND BUTTON |
| 10. VOLUME CONTROL | 25. TOP SPEAKERS (LEFT & RIGHT) |
| 11. SD CARD SOCKET | 26. CD/ RADIO DIGITAL DISPLAY |
| 12. USB SOCKET | 27. MAIN SPEAKERS (LEFT & RIGHT) |
| 13. CASSETTE FAST FORWARD BUTTON | 28. CASSETTE DOOR |
| 14. CASSETTE STOP & EJECT BUTTON | 29. BATTERY DOOR COMPARTMENT
(UNDER THE UNIT) |
| 15. CASSETTE PAUSE BUTTON | 30. HEADPHONE (EARPHONE) SOCKET
(REAR OF UNIT) |

E-3

POWER SUPPLY

BATTERY OPERATION

  - OPEN THE BATTERY DOOR AND INSERT 6 PCS "C-CELL" (UM-2/ LR14 TYPE) BATTERIES. PLEASE OBSERVE CORRECT BATTERY POLARITIES OR THE SET WILL NOT WORK.
- IMPORTANT: WHEN THE SET IS ONLY USED WITH AC, OR IS NOT USED FOR 4 WEEKS OR MORE, PLEASE REMOVE THE BATTERIES, TO AVOID DAMAGE TO THE SET FROM LEAKAGE OF BATTERIES.

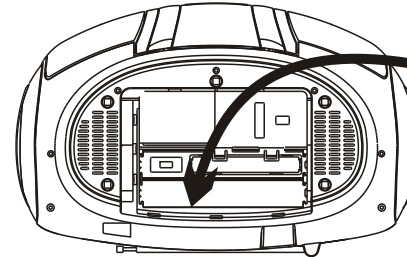

UM-2"/C/LR14
(1.5V) SIZE x 6 PCS.

AC OPERATION (BUILT-IN TRANSFORMER)

- MAKE SURE THE SET VOLTAGE OF THE UNIT MATCHES YOUR LOCAL HOUSEHOLD VOLTAGE.
- THE AC-CORD IS LOCATED INSIDE THE BATTERY COMPARTMENT.
- INSERT THE PLUG OF THE AC-CORD INTO A WALL OUTLET WITH AC-POWER.

IMPORTANT!

PLEASE NOTE THAT THE POWER OF THE SET IS "OFF" WHEN THE FUNCTION SWITCH IS ON "TAPE" POSITION & NO CASSETTE BUTTON IS PRESSED.

SUPER BASS FUNCTION

THE BUILT IN "SUPER BASS BOOSTER" CIRCUIT PROVIDES A POWERFUL ENHANCEMENT TO LOW FREQUENCY MUSIC, GIVING A STRONGER BASS SOUND WHICH IS IDEAL FOR "ROCK" OR "JAZZ" MUSIC. THIS FUNCTION IS ONLY EFFECTIVE FOR CD-MODE, CD-MP3, USB-MP3 AND SD-MP3 PLAYBACK MODE. ANYTIME DURING PLAYBACK, SLIDE THE "DBBS ON/OFF" SWITCH AS REQUIRED.

OPERATION OF RADIO








- SET THE FUNCTION SWITCH TO "RADIO" AND THE BAND SELECTOR SWITCH TO THE DESIRED BAND.
- ROTATE TUNING KNOB TO TUNE-IN THE DESIRED STATION. AS DISPLAYED IN THE LCD DIGITAL DISPLAY.
- ADJUST THE TELESCOPIC ANTENNA AND POSITION OF THE SET TO OBTAIN THE BEST RECEPTION.
- ADJUST THE VOLUME KNOB TO THE DESIRED LEVEL.
- TO TURN OFF THE RADIO, SLIDE THE FUNCTION SWITCH TO "TAPE" (OFF) POSITION, WITHOUT ANY TAPE BUTTON PRESSED.

E-4



 






INSERTION & REMOVAL OF DISCS

- WHEN OPENING THE CD-DOOR, ALWAYS ENSURE THE DISC IS NOT IN MOTION (NOT SPINNING) WHEN YOU OPEN THE CD-DOOR. ALWAYS PRESS "STOP" BUTTON TO STOP THE DISC SPINNING FIRST.
- PLACE A CD INTO THE COMPARTMENT WITH THE LABEL-SIDE (PRINTED SIDE OF DISC) FACING UPWARDS. PRESS DOWN IN THE CENTRE PART OF DISC UNTIL THE DISC "LOCKS" ONTO THE CENTRE SPINDLE.
- WHEN THE CD HAS BEEN PLACED ONTO THE CENTRE SPINDLE, GENTLY LOWER THE CD-DOOR DOWNWARDS UNTIL IT LOCKS SHUT.
- THE CD IS NOW READY TO BE PLAYED.
- TO REMOVE A DISC, FOLLOW THE SAME PROCEDURE AS DESCRIBED ABOVE, EXCEPT TO REMOVE THE CD INSTEAD OF INSERTING IT INTO THE COMPARTMENT, BY PLACING ONE FINGER AT THE MIDDLE OF DISC (CENTRE SPINDLE) & THE OTHER AT THE EDGE OF THE DISC & GENTLY PULLING UPWARDS.
- IMPORTANT : ALWAYS HOLD A CD BY ITS EDGES. AVOID GETTING ANY FINGER PRINTS, SMUDGES OR DIRT ONTO THE SURFACE OF A DISC. IN CASE THIS HAPPENS, USE A SPECIAL CD-CLEANING CLOTH OR CLEANING KIT TO REMOVE THE DIRT OR SMUDGES.






NORMAL CD OPERATION

- INSERT A CD AS DESCRIBED.
- SLIDE THE FUNCTION SWITCH TO "CD".
- THE CD WILL SPIN MOMENTARILY AND THEN THE DISPLAY WILL SHOW THE TOTAL NUMBER OF TRACKS (SONGS) OF THE DISC.
- PRESS THE PLAY BUTTON . THE DISC WILL START SPINNING & THE FIRST SONG (TRACK) WILL START PLAYING. THE DISPLAY WILL INDICATE THE CURRENT TRACK NO. ("1" IF IT IS THE FIRST TRACK).
- AT ANYTIME DURING PLAYBACK, PRESS THE PLAY BUTTON  TO PAUSE OPERATION OF THE UNIT. PRESS PLAY BUTTON TO RESUME OPERATION AT THE SAME TRACK & POSITION.
- AT ANYTIME DURING PLAYBACK, PRESS THE "STOP" BUTTON  TO STOP OPERATION OF THE SET. THIS WILL RESET THE CD PLAYER TO THE FIRST TRACK (IF YOU PRESS PLAY AFTER STOP, THE FIRST TRACK WILL ALWAYS START PLAYING).
- AT ANYTIME DURING PLAYBACK, "PRESS AND RELEASE" THE BACK/NEXT BUTTONS :  OR  TO SKIP BACKWARDS OR FORWARDS BY ONE TRACK, AS DESIRED.
- AT ANYTIME DURING PLAYBACK, "PRESS AND HOLD" THE BACK / NEXT BUTTONS :  OR  TO FAST-REVERSE (REVIEW) OR FAST-FORWARD (CUE) THE SPECIFIC TRACK, WHICH IS CURRENTLY PLAYING.
- AT ANYTIME DURING PLAYBACK, PRESS THE "CD REPEAT BUTTON" AS FOLLOWS:
 - PRESS ONCE = DISPLAY IS FLASHING, TO REPEAT THE CURRENT TRACK
 - PRESS TWICE = TO REPEAT ALL TRACKS (FULL CD)

HOW TO PLAY MP3 DISCS

- INSERT A MP3 CD DISC, CLOSE THE DOOR.
- SLIDE THE FUNCTION SWITCH TO CD (MP3) POSITION.
- THE DISK WILL SPIN AND PERFORM A FULL CHECK OF THE DISC TO COUNT THE TOTAL NUMBER OF SONGS. THEN PLAYBACK OF THE FIRST SONG (TRACK) WILL BEGIN AND THE DISPLAY WILL INDICATE THE CURRENT TRACK NO: (001).
- AT ANY TIME DURING PLAYBACK, PRESS AND RELEASE  OR  TO SKIP BACKWARDS OR FORWARDS BY ONE TRACK.
- MP3 DISCS OFTEN HAVE "FOLDER" (SUB-DIRECTORIES) WHICH CONTAIN GROUPS OF SONGS.
- IF YOUR MP3-CD HAS NO FOLDERS, YOU CAN USE THE  BUTTON TO JUMP 10 SONGS AHEAD. THIS IS USEFUL IF YOU HAVE MANY SONGS.
- PRESS  SEVERAL TIMES UNTIL YOU REACH A SONG NUMBER ON YOU WANT TO QUICKLY JUMP TO A PARTICULAR SONGS. NEAR TO YOUR DESIRED SONG, AND THEN PRESS "BACK"  OR "NEXT"  REPEATEDLY TO ARRIVE AND THE EXACT SONG YOU DESIRE.
- IF YOUR MP3-CD HAS FOLDERS, YOU CAN SELECT THE FOLDER TO PLAYBACK BY PRESSING AND HOLDING THE  BUTTON.
- EACH TIME YOU PRESS THE  BUTTON, THE PLAYER JUMPS TO THE FIRST SONG IN THE NEXT FOLDER.
(NOTE: THE "FOLDER" FUNCTION ONLY WORKS ON MP3-DISCS WHICH HAVE FOLDERS. IF YOUR DISC HAS NO FOLDERS, PRESSING  WILL PERFORM THE "SKIP +10" FUNCTION).

PROGRAMMING THE CD PLAYER

- THE CD PLAYER CAN BE PROGRAMMED TO PLAY ANY SEQUENCE OF UP TO 20 TRACKS FOR AUDIO CD, 99 TRACKS FOR MP3, AS DESIRED.
- ALWAYS PRESS THE STOP  SWITCH BEFORE STARTING THE PROGRAMMING
- PRESS THE PROGRAM BUTTON ,THE DISPLAY WILL SHOW "P01" AND THE "PROGRAM" LED LIGHT WILL FLASH, TO INDICATE THAT THE SET IS NOW IN "MEMORY PROGRAMMING MODE", AT THE FIRST MEMORY POSITION.
- PRESS THE BACK/NEXT SWITCHES  OR  TO SELECT THE TRACK (SONG) NUMBER YOU WISH TO BE STORED IN THE FIRST MEMORY (PROGRAM) POSITION, AND PRESS THE PROGRAM BUTTON TO CONFIRM YOUR SELECTION.
- WHEN YOU PRESS THE PROGRAM BUTTON THE DISPLAY WILL ADVANCE TO THE NEXT MEMORY POSITION (eg. "P02").
- REPEAT THE PREVIOUS 2 STEPS, EACH TIME SELECTING ANY TRACK NUMBER OF YOUR CHOICE TO BE STORED IN THE SUCCESSIVE MEMORY (PROGRAM) POSITIONS.
- AFTER EACH TRACK NUMBER, REMEMBER TO PRESS THE PROGRAM BUTTON.
- AFTER A MAXIMUM SONGS (OR LESS) HAVE BEEN SELECTED AS DESCRIBED ABOVE, PRESS THE PROGRAM BUTTON.
- THE DISPLAY WILL NOW SHOW THE EXACT SONG SEQUENCE IN MEMORY BY DISPLAYING ALL THE SONG NUMBERS RAPIDLY.
- ALSO, THE "PROGRAM" LED-LIGHT WILL REMAIN "ON" TO INDICATE THAT YOU HAVE SAVED A PROGRAM-MEMORY (SEQUENCE).
- PRESSING PLAY  WILL NOW PLAY BACK THE "SAVED SEQUENCE" IN THE PROGRAM MEMORY.
- TO CLEAR (CANCEL) THE ENTIRE PROGRAM WHICH IS STORED IN THE MEMORY, SIMPLY PRESS "STOP"  ONCE, OR SWITCH "OFF" THE SET.

USB DRIVE AND SD-CARD FLASH MEMORY MP3 PLAYBACK

- THIS UNIT IS EQUIPPED WITH A USB SOCKET WHICH CAN ACCEPT AND PLAY MP3 FILES STORED ON STANDARD USB FLASH DRIVES (ALSO KNOWN AS "PEN DRIVES") WHICH ARE FOR MEMORY STORAGE. (COMPATIBLE WITH USB VERSION 1.1 & 2.0).
- THIS UNIT IS ALSO EQUIPPED WITH AN SD CARD SOCKET WHICH CAN ACCEPT AND PLAY MP3 FILES STORED ON STANDARD "SD CARDS WHICH ARE USED FOR MEMORY STORAGE.
- SLIDE THE FUNCTION SWITCH TO "CD (CD-MP3/ USB-MP3/ SD-MP3) POSITION.
- TO UTILISE THIS FACILITY, FIRST INSERT EITHER A USB-RIVE OR A SD-CARD INTO THE CORRECT SLOT.
- PRESS AND HOLD (FOR 2 SECONDS) THE "STOP/ CD/ USB/ SD" KEY REPEATEDLY TO SELECT BETWEEN:



- THE DISPLAY WILL SHOW THE "USB" OR "SD" SYMBOL & WILL CHECK IF ANY MP3 SONG FILES ARE FOUND.
- IF MP3 FILES ARE FOUND, THE SET WILL START PLAYBACK OF THE FIRST MP3 SONG FILE & THE DISPLAY WILL INDICATE THE TRACK NUMBER INFORMATION JUST LIKE A MP3-CD PLAYBACK.
- PLAYBACK CONTROL (PLAY, PAUSE, BACK, NEXT, STOP) ARE ALSO EXACTLY SAME AS WITH A MP3-CD DISC.
- YOU MAY ALSO USE THE "SKIP +10/ FOLDER" KEY IN THE SAME MANNER AS WITH MP3-CD PLAYBACK.
- YOU CAN ALSO PROGRAM THE PLAYBACK OF UP TO 99 MP3 TRACKS (SONGS) SIMPLY FOLLOW THE SAME PROCEDURE AS DESCRIBED IN THE PREVIOUS SECTION : "PROGRAMMING THE CD-PLAYER".

IMPORTANT REMOVAL OF USB DRIVES & SD-CARDS

NEVER REMOVE (OR UNPLUG) USB-DRIVES OR SD-CARDS FROM THE SET DURING PLAYBACK OF MP3 SONGS FROM THESE MEDIA. ALWAYS PRESS **[STOP]** FIRST AND THEN SLIDE THE FUNCTION SWITCH TO ANOTHER SOURCE (eg. "RADIO" OR "TAPE") BEFORE REMOVING OR UNPLUGGING USB/SD MEMORY, TO PREVENT DAMAGE TO YOUR SONG FILES OR MEMORY DEVICES.

IMPORTANT POINT

Please do NOT use a USB Extension Cable to connect your USB FLASH DRIVE to the USB PORT of this unit. Such cables can pick up additional interference which can corrupt the data flow, preventing normal operation and usage of the USB port. Always connect your USB Flash Drive DIRECTLY to the USB PORT without any USB extension cables.

NOTE:

ALTHOUGH THIS PRODUCT IS FULLY COMPATIBLY WITH USB 1.1 & 2.0 STANDARDS, A SMALL PERCENTAGE (ABOUT 5%) OF USB FLASH DRIVES MIGHT NOT BE READABLE, DUE TO THOSE USB-FLASH DRIVE MANUFACTURERS NON-COMPLIANCE WITH THE FULL (OFFICIAL) USB 1.1 / 2.0 STANDARDS.
IMPORTANT: THIS UNIT DOES NOT SUPPORT USB-MP3 PLAYER, DUE TO THEIR INHERENT LACK OF SOFTWARE COMPATIBILITY. ONLY USB "PEN DRIVES" (FLASH MEMORY USB DRIVES) CAN BE USED, FOR MP3 PLAYBACK.

IMPORTANT MP3 FILE NAME FORMAT

PLEASE TAKE CARE TO USE ONLY REGULAR ENGLISH ALPHABETS (A TO Z) & NUMERALS (0 TO 9) IN THE FILE NAMES OF MP3 SONGS. CHARACTERS SUCH AS " _ " (UNDERSCORE) & " " (SPACE) MAY RESULT IN THE FILES BEING UNREADABLE OR INCONSISTENTLY UNRECOGNISABLE BY THE PLAYER.

CASSETTE TAPE PLAYBACK

- SLIDE THE FUNCTION SWITCH TO THE "TAPE (OFF)" POSITION.
- OPEN THE CASSETTE DOOR BY PRESSING THE "STOP/EJECT" CASSETTE BUTTON.
- INSERT A PRE-RECORDED CASSETTE WITH THE TAPE-SIDE UP, INTO THE PROPER GUIDE-RAILS ON THE INSIDE OF THE CASSETTE DOOR.
- GENTLY PUSH THE CASSETTE DOOR FORWARD (INWARDS) TO CLOSE IT. MAKE SURE THE TAPE IS FULLY AND PROPERLY INSERTED BEFORE DOING SO.
- PRESS THE CASSETTE-PLAY BUTTON. THIS WILL START THE PLAYBACK. NOTE THAT THE TAPE MOVES FROM RIGHT TO LEFT.
- ADJUST THE VOLUME TO THE DESIRED LEVEL.
- THE TAPE PLAYBACK CAN BE STOPPED AT ANYTIME, BY PRESSING THE "STOP" BUTTON. AT THE TAPE'S END, THE SET SWITCHES ITSELF OFF AUTOMATICALLY, AND RELEASES THE PLAY BUTTON AT THE SAME TIME.
- PRESS THE "STOP" BUTTON FOLLOWED BY THE "REWIND" OR "FAST-FORWARD" BUTTON TO REWIND OR FORWARD THE TAPE AT HIGH SPEED.

CASSETTE TAPE RECORDING

- OPEN THE CASSETTE DOOR BY PRESSING THE "STOP/EJECT" CASSETTE BUTTON.
- INSERT A BLANK CASSETTE WITH THE TAPE-SIDE UP, INTO THE PROPER GUIDE - RAILS ON THE INSIDE OF THE CASSETTE DOOR.
- GENTLY PUSH THE CASSETTE DOOR FORWARD (INWARDS) TO CLOSE IT. MAKE SURE THE TAPE IS FULLY AND PROPERLY INSERTED BEFORE DOING SO.
- THE SET IS NOW READY TO START RECORDING, WHICH CAN BE DONE FROM EITHER THE RADIO OR CD-PLAYER.

RECORDING FROM RADIO

- SLIDE THE FUNCTION SWITCH TO "RADIO" POSITION.
- TUNE IN THE DESIRED STATION BY TURNING THE TUNING KNOB. IF NECESSARY, EXTEND THE TELESCOPIC ANTENNA, AND ADJUST POSITION OF THE SET TO IMPROVE RECEPTION.
- PRESS THE CASSETTE PLAY AND RECORD BUTTONS TOGETHER.
- SIMPLY PRESS THE CASSETTE STOP BUTTON TO STOP RECORDING.

RECORDING FROM CD, CD-MP3, USB-MP3 AND SD-MP3

- SLIDE THE FUNCTION SWITCH TO "CD (CD-MP3/ USB-MP3/ SD-MP3)" POSITION.
- START TO PLAYBACK WITH THE DESIRED SOURCE AS PREVIOUSLY DESCRIBED.
- PRESS THE CASSETTE PLAY AND RECORD BUTTONS TOGETHER TO START RECORDING.
- SIMPLY PRESS THE CASSETTE STOP BUTTON TO STOP RECORDING.

PRESERVATION OF RECORDINGS

- TO PREVENT ACCIDENTAL ERASING OF A CASSETTE, SIMPLY BREAK OFF THE TWO PLASTIC TABS LOCATED ON THE CASSETTE TAPE'S REAR EDGE.
- WHEN A CASSETTE WITH REMOVED PLASTIC TABS IS INSERTED, THE RECORDING BUTTON CANNOT BE PRESSED.
- IF A CASSETTE IS TO BE ERASED AND RE-RECORDED AT A LATER STAGE, SIMPLY COVER THE HOLES ON THE CASSETTE WHERE THE TABS WERE REMOVED, WITH A PIECE OF STRONG ADHESIVE TAPE.

SPECIFICATIONS

POWER SUPPLY :	AC 230V - 240V , 50Hz DC 9V (6 x C-CELL/ UM-2/ LR14 SIZE) (BATTERIES NOT INCLUDED)
POWER CONSUMPTION :	15W
OUTPUT POWER PER CHANNEL :	1.5W
FREQUENCY :	AM 530 - 1600 kHz FM 88 - 108 MHz

THE APPARATUS SHOULD NOT BE EXPOSED TO DRIPPING OR SPLASHING AND NO OBJECTS FILLED WITH LIQUIDS SHOULD BE PLACED ON THE APPARATUS.

THE MARKING AND RATING LABEL IS LOCATED AT REAR ENCLOSURE OF THE APPARATUS.

THE MAINS PLUG IS USED AS THE DISCONNECT DEVICE AND IT SHALL REMAIN READILY OPERABLE. TO BE COMPLETELY DISCONNECTED THE POWER INPUT, THE MAINS PLUG OF THE APPARATUS SHALL BE DISCONNECTED FROM THE MAINS COMPLETELY. THE MAINS PLUG SHOULD NOT BE OBSTRUCTED OR SHOULD BE EASILY ACCESSED DURING INTENDED USE.

UNDER THE INFLUENCE OF ELECTROSTATIC PHENOMENON, THE PRODUCT MAY MALFUNCTION AND USER TO POWER RESET.

EXCESSIVE SOUND PRESSURE FROM EARPHONES AND HEADPHONES CAN CAUSE HEARING LOSS.

BATTERY SHALL NOT BE EXPOSED TO EXCESSIVE HEAT SUCH AS SUNSHINE, FIRE OR THE LIKE.

CAUTION
DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE.

ELECTROSTATIC DISCHARGE (ESD) PRECAUTION

WHEN ELECTROSTATIC DISCHARGE (ESD) OCCURS AT THE FRONT SURFACE (WHETHER METAL OR PLASTIC) OR NEAR ANY PART OR ANY BUTTON OF THIS UNIT, OR AT THE USB PORT AND/ OR SD-CARD SLOTS (IF THEY EXIST ON THIS PRODUCT), THERE MAY BE A POSSIBILITY THAT THE PRODUCT MAY STOP OPERATION AND/ OR SHUT DOWN IMMEDIATELY. THIS IS A NORMAL CONDITION AND INTENDED TO PROTECT THE UNIT AND INTERNAL COMPONENTS AGAINST DAMAGE. IN SUCH A CASE, PLEASE RESET THE UNIT (BY DISCONNECTING AND RECONNECTING AC-POWER SOURCE) TO REVERT THE UNIT TO NORMAL OPERATION.

PALSONIC CORPORATION PTY LTD
1 JOYNTON AVENUE
WATERLOO NSW 2017 AUSTRALIA
TEL: (02) 9313 7111
FAX: (02) 9313 7555
www.palsonic.com.au

**PALSONIC CUSTOMER SERVICE
TELEPHONE
AUSTRALIA: 1300 657 888**